MITERFOLD ASSEMBLY

8 STEPS FOR EASY MITERFOLD ASSEMBLY

Before you start, place the entire pallet of drawer components in the assembly area. A scissor-lift will enhance your efficiency by allowing you to raise the work to a comfortable level.

1 WIPE AWAY DUST

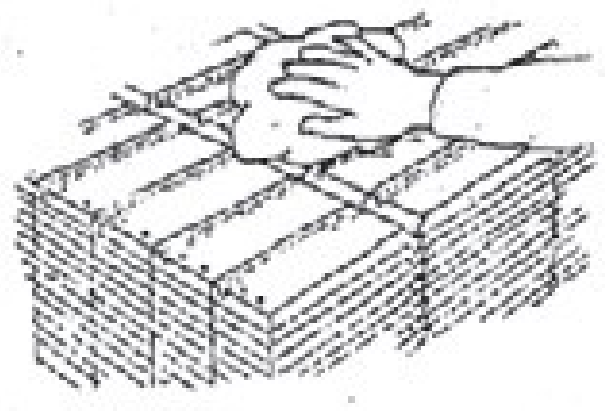

Wipe all dust and other particles from drawers if necessary.

2 GLUE THE MITERS

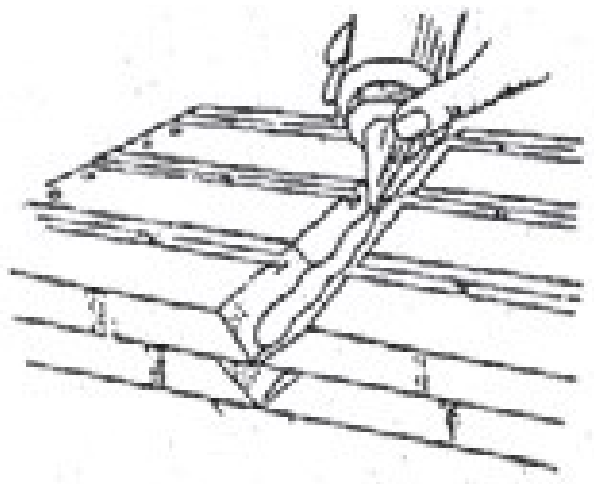

Apply wood glue to each row of miters. A dab of wood glue in the dowel holes is also recommended.

3 GLUE THE BOTTOM GROOVE

OPTIONAL

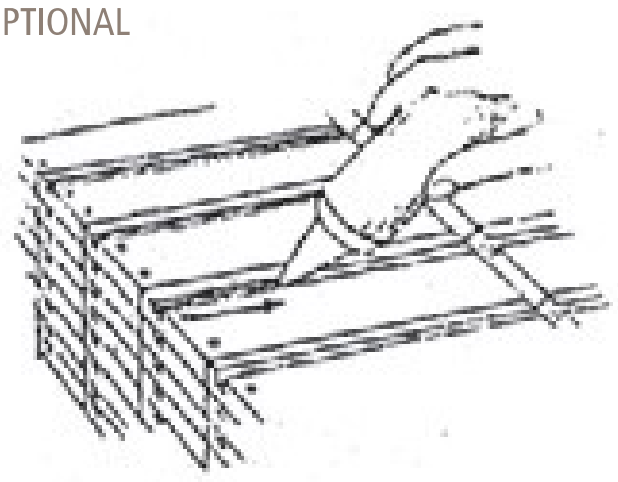

Apply wood glue to the bottom groove. (This will "hold the square" of the finished drawer, and double its strength.)

4 INSERT THE BOTTOMS

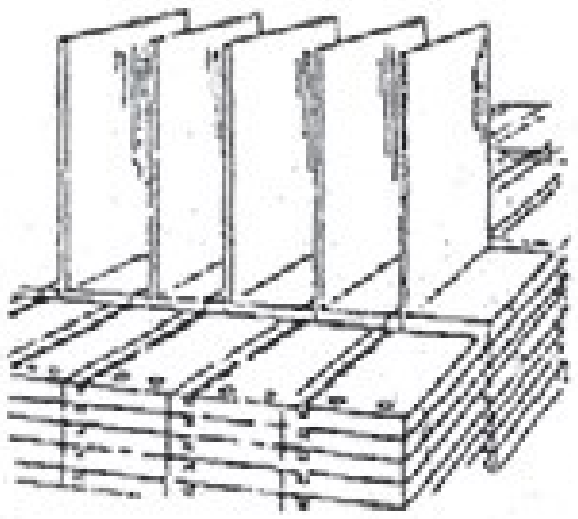

Place drawer bottoms in bottom grooves across entire pallet.

5 FOLD UP THE SIDES

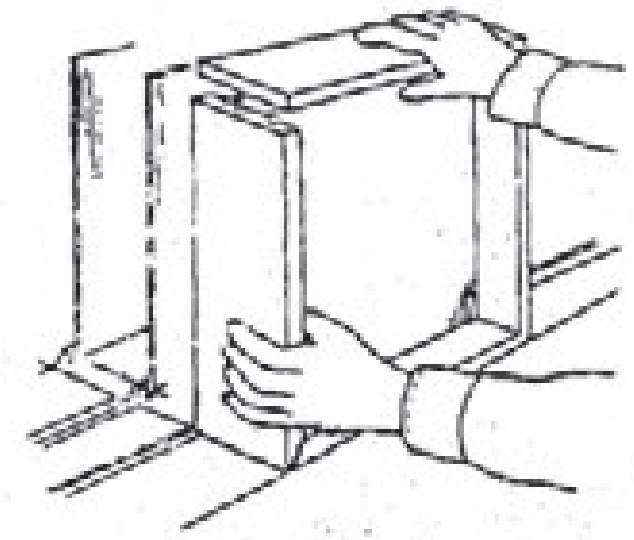

Fold the miterfold drawers around the bottoms.

6 SEAT THE DOWELS

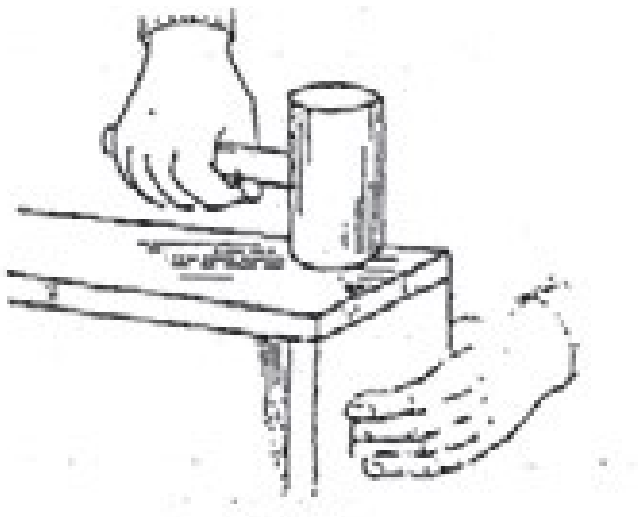

Tap the dowels gently into place, positioning the mallet in the center of the drawer side.

7 HOT MELT DRAWER

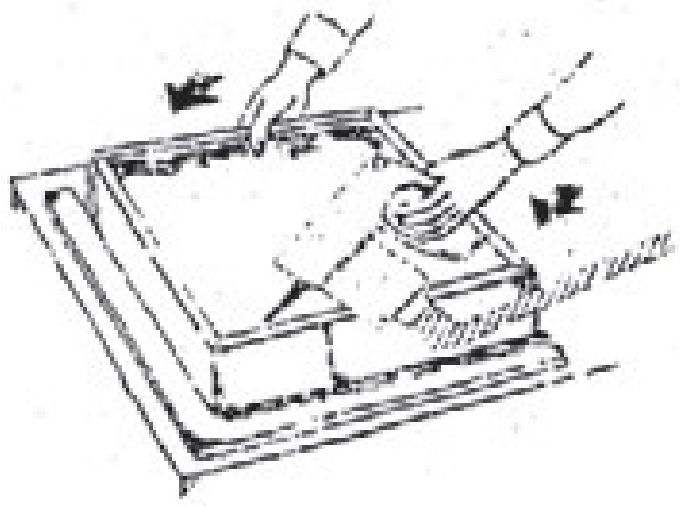

Hot melt drawer bottom while nesting in a square jig.

8 STACK THE DRAWER

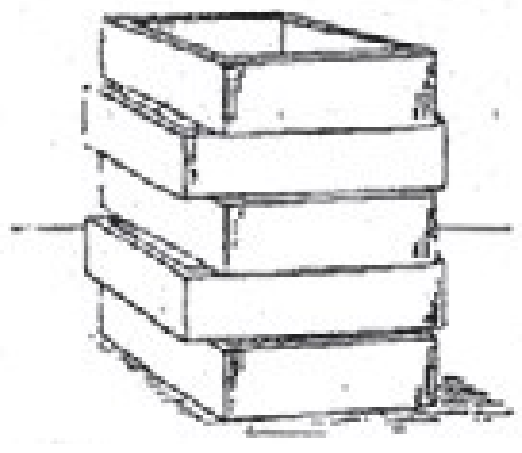

Stack the assembled drawer to allow hot melt to cure.

OLON®

GEORGETOWN, ON
Tel: (800) 387-2319
Fax: (905) 877-7383

WASHINGTON, IN
Tel: (800) 522-8521
Fax: (812) 254-2981

DRWBRO/22